


Children’s Electric Ride On Car
Installation And Operation Manual



Official
Licensed Product

Model: Volkswagen Arteon
Age Range: 37-96 Month
Maximum Weight: 30 KGS
Execution Standard:
GB6675&GB19865 ☐
EN71&EN62115 ☐

Battery Operated Ride On Vehicle
Volkswagen Arteon



Pictures are for reference only. Please adhere to the original products as standard.

SPARE PARTS LIST



Assembling Procedure (Must be assembled by Adults)

1:Assembling motors.



- 1.Please find motors in the car and disconnect the lines.
- 2.Insert motors into axle.
- 3.Connect motors again after making lines of motor passing the holes on the car.Please referring to the photos above.

2:Assembling wheels.



Insert the sleeves **Reminder: Please bend the cotter pin into circle otherwise it will hurt the wheels.**




- 1.Get the sleeves out from the screws&bolts bag and insert both inside and outside of front wheels, and outside of back wheels.
- 2.Insert one metal gasket into the axle.
- 3.Put the wheels into the axle.
- 4.Insert the cotter pin into the hole of axle and make it as cross.
- 5.Put the wheel cover onto the wheel.
Please referring to the photos above.

3.Assembling steering wheel.



- 1.Connect the lines of steering wheel with the lines from the car in the steering wheel position.
Reminder:
Since the axle of steering wheel can move easily sometimes, there maybe some situations that customers can not aim at the hole of steering wheel to insert the lead screw. If any, please use hands to hold the hook from bottom of car to help inserting the lead screw into the hole.
According to the photos above.

4.Connecting power

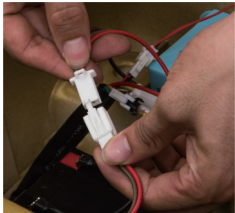

Connect power lines according to photo above.

5.Assembling seats



- 1.Put the seat into the car.
- 2.Insert the buckles of seat back into the car.
- 3.Fix seat by screws.

6:Assembling rear view mirrors.



7:Assembling rear view mirrors.



Inserting the rear view mirrors into the holes, making sure left and right.
Please refer to photos above.

Explosive View



■ Specifications

Item	Specifications
Battery	12V7AH/12V10AH
Motor	35W
Available Ages	Children from 37-96 month
Maximum Weight	30KGS
Size	123*76*61cm
Speed	3-5km/h
Charging Time	8-12hours
Remote Control Batteries	2PCS of AAABatteries
Charger	Input:220V/110V Output:DC12v1000MA

■ CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal.

- Press the power switch to OFF position to turn the power off.
- Open the seat,connect the battery plug,red to red.
- Never drain battery completely or to a crawling speed,recharge the battery when a decrease in speed and power is noticed warranty will be voided if misuse has occurred.
- Battery charging must be done by adults only.Never allow children to charge the battery.A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit.

The charger and the battery are not a toy.Do not allow children to play with the charger and the battery.


Only operate the battery and charger specified according to the manual instructions.

- Please do not open the battery and the charger.
- To maintain safety of vehicle, always secure the battery with the bracket.
- The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte).Dropping the battery could result in serious injury.
- Before charging the battery check if wear or damage to the battery,charger , the connectors and other parts .If any damage is found , the charger should be repaired or replaced immediately .Do not use a damaged charger.
- It is normal for the adaptor to feel warm during charging,,but if the charger feels too hot,stop charging immediately and check the battery and adaptor.

When charging turn of the power switch.
Please charge the battery for 4-6 hours after first use.
Subsequent charges should be8-12hours but not exceeding 12 hours.
If not being used batteries should still be charged at least once a month to keep the cells active.
1.Plug the charge into the charging socket.
2.Plug the other end of the charger into your wall socket.
Batteries are perishable items that are subject to under and overcharging, please observe the charging times.Charge Hole

■ TROUBLE SHOOTING

Problem: The car will not move
Answer 1: Please make sure the charger has been removed from the car charging point.
Answer 2: The battery is low on charger. Please charger for 6-8 hours but not exceeding 10hours.
Charge at least once a month to keep the cells activ

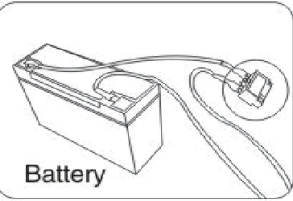

- To avoid fuse cut off the power:
- 1.Max:30kgs, overload is forbidden
 - 2.Do not drag ay item behind this product
 - 3.Do not allow water or other liquids dip the electrical parts.
 4. Do not change the line system by yourself.

⚠ WARNING

- For safe driving, please kindly pay attentions to the following warning matters.
- The product must be assembled and adjusted by adult, please keep children away from moving parts.
- The product doesn't apply to 36-month and younger children due to internal small parts
- During driving, a child must be fixed by seat belt properly. Do not close to an fire!
- Any child must be supervised by adult while using the product and such the adult caregiver should not leave during driving process.
- Do not allow your children to stand or play on the food pedal or in the electric car.
- The battery must be charged only by adult. Please charge the product before using!
- To avoid any harm to children, please keep plastic bags and other packaging materials away from children! Such the materials may cause suffocation!
- It is prohibited to use any parts from other manufacturers.
- The charger should not be played as a toy.
- The vehicle maximum load weight is 30KG, and please do not use on overload,
- The product applies to children at 37-96 months.
- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Must with the protection device, can't use as traffic tools.
- This toy without braking device.
- Instructions for remote controller batteries.
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- Power terminals should not be short-circuited.
- Any rechargeable battery must only be charged under adult's supervision.
- Rechargeable batteries should be removed from the toy before charging.
- Exhausted batteries are to be removed from the toys

■ TROUBLE SHOOTING

Problem:The car only runs for a short time

Answer 1:The battery is low on charge. Please change for 8-12 hours but not exceeding 12 hours.
Change at least once a month to keep the active.
Answer 2:Battery ageing
The battery may need to be replaced depending on it's charging history and age.

Problem: The sounds do not work.
Please ensure the volume is turned up and the Mp3 lead is not connecthed.
The steering wheel sounds will not work when the MP3 is plugged into the car.
Problem: Charger overheating
It is normal for the battery and charger to warn slightly during Charging, if they feel excessively hot then please Check for a current overload or battery short circuit

WARNING:Vehicle must be charged fully before use.
Please read manual carefully before use.

Adult assembly required.
This toy have no brake.
Not to be used in traffic
Always wear a helmet and protective clothing when riding.
Continuous adult at all times.
Pleasae keep the manual and packing for future reference as it contains important information
The instructions for used should bear a reminder that the toy should be used with caution since skill
Is require to avoid falls or collisions causing injury to the user or third parties.

■ SAFETY PRECAUTIONS

01. While riding , adult supervision is required all the time
02. Always wear a helmet when driving/
03. Please dont drive near road or on the footpath.
04. Itis not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please dont driving this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please dont allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children around safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please dont let any child touch the wheels or be near them when the car is moving.
20. Please mind fingers in opening and closing doors.

USING INSTRUCTION



- 1: MP3
- 2: display
- 3:TF socket
- 4:USB socket
- 5:Story (Pressing for a longer time and it will lower the volume)
- 6:Music(Pressing for a longer time and it will Higher the volume)
- 7:Education(Next one)
- 8:Model choose(Radio,Bluetooth,SD Card,MP3,USB Connector)

*Story/V-: Mode of Story/V-
Pressing slightly and it will be prior music or broadcast channel. Pressing for a longer time and it will lower the volume.
*Music/V+:Mode of Music/V+
Pressing slightlg and it will be next music or broadcast channel. Pressing for a longer time and it will higher the volume.
*Song/XX: Mode of Songs
Pressing longer and it will search broadcasting station automaticly.
*Education: Earlier education.
Mode: Radio, Bluetooth, SD Card, MP3, USB connector
Speaker: Horns of cars

- 1.Press the music button on the steering wheel for horn or music.
 - 2.Attach the MP3 lead to your advice to play or own music through the car.
- Please note the steering wheel sounds will not work when the MP3 lead is connected.



Operations Guide
First time to use(Or replace the battery)
select not to pair,the car can move after turning on power.
If select to be paired,please follow the bellows:
Step 1 Open the remote control battery compartment,put two AAA1.5V batteries into the battery compartment(pay attention to the battery cavity polarity),close the cap,the frequency lamp flashes if the battery is installed correctly.
Step 2 Turn the car power , hold press the frequency key for 2-3 seconds.
Step 3 Then turn on car power immediately , the frequency lights off.
Please repeat steps 23 if the paring not in success of frequency.
General use
1.Speed Selection - LOW speed:Only one lamp flashing;
MED speed - Two lamps flashing;
HIGH speed - Three lamps flashing.Each owns slow start and stop.
2.Press the STOP key will stop the car;Other keys like it meant.
3.The remote control will power off after 15's without operating,any key will power on.
Products through the FCC certification testing and ECM credential.
This remote must be used by adult only

Pictures are for reference only, please adhere to the original products as standard