
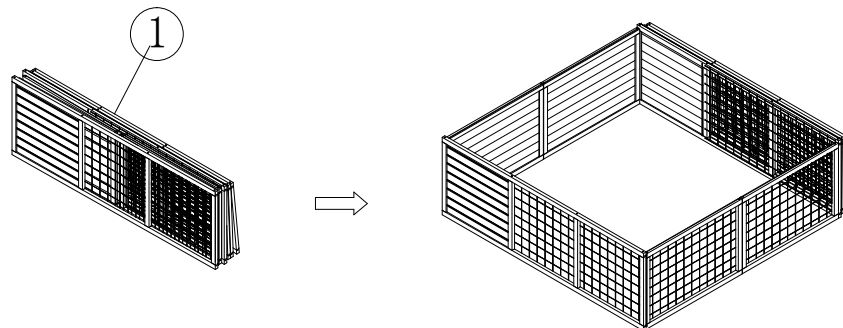

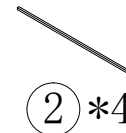


ASSEMBLY INSTRUCTION


- ① M3*16 12PCS+1
- ② M3*20 12PCS+1
- ③ 4PCS
- ④ 1PCS
- ⑤ M3*30 3PCS+1

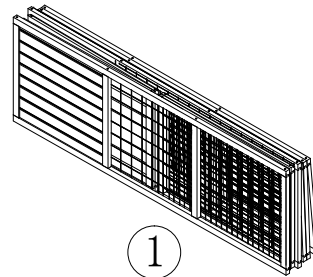

STEP 1

- ① M3*16 8PCS


- ③ 4PCS

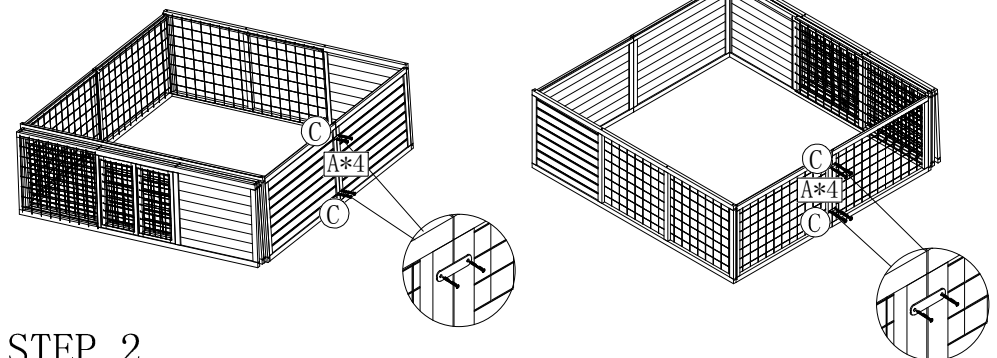

STEP 2

- ② M3*20 12PCS


- ⑤ M3*30 3PCS
- the Woodstrip must be fixed 25 mm under the Frame from the Top Wood

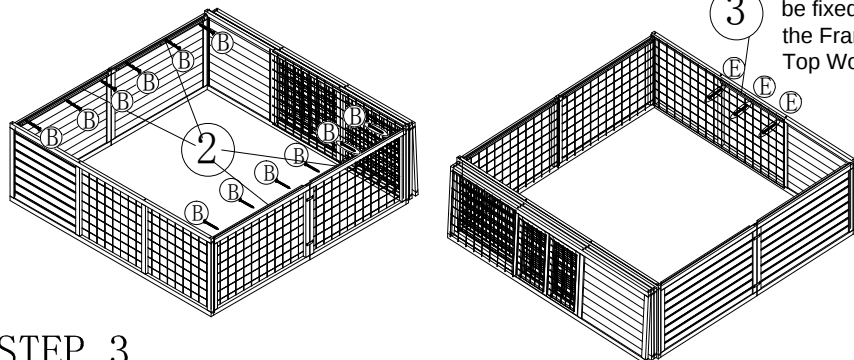

STEP 3

- ① M3*16 4PCS

- ④ 1PCS

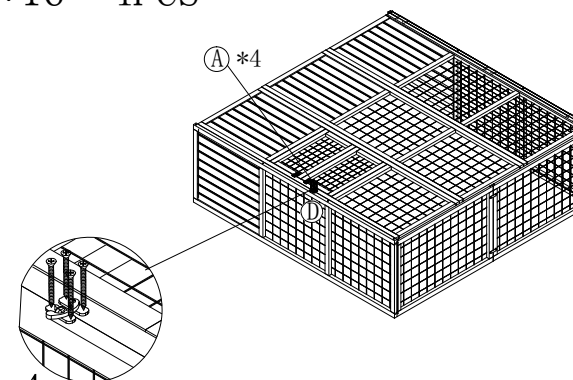

STEP 4