
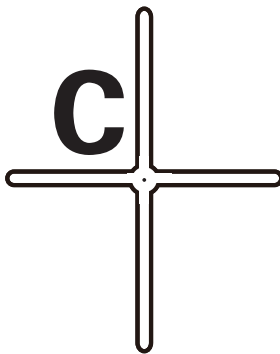
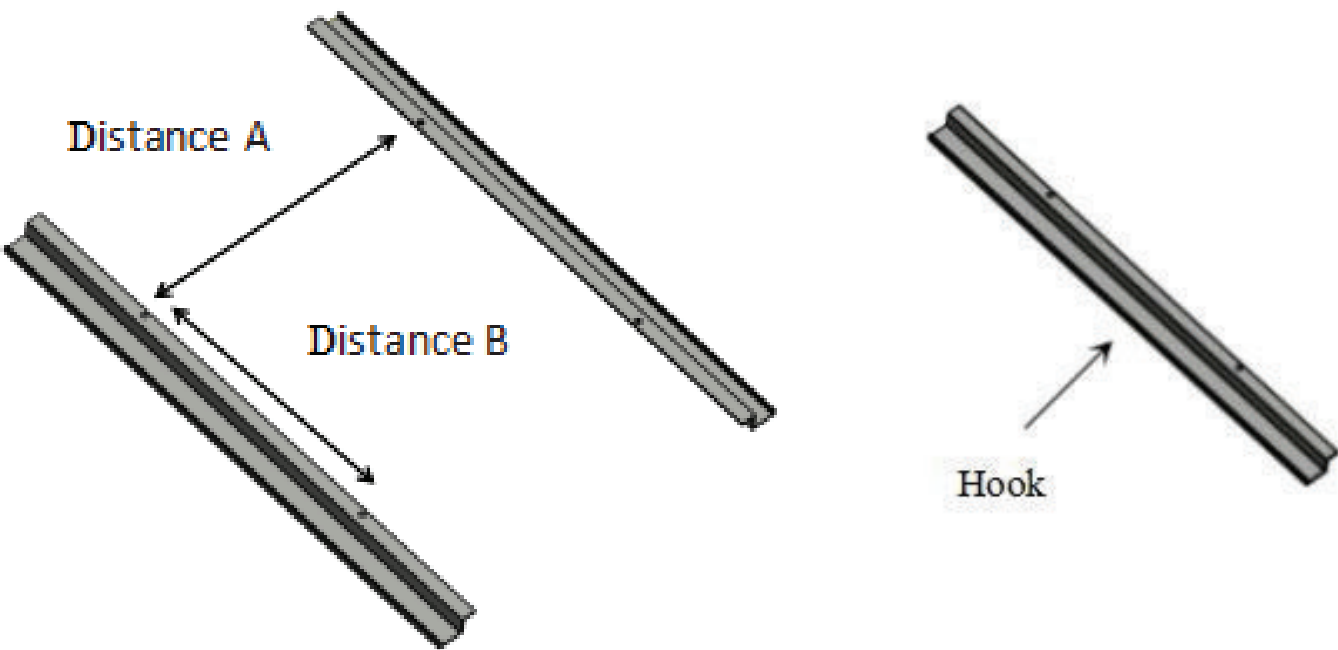
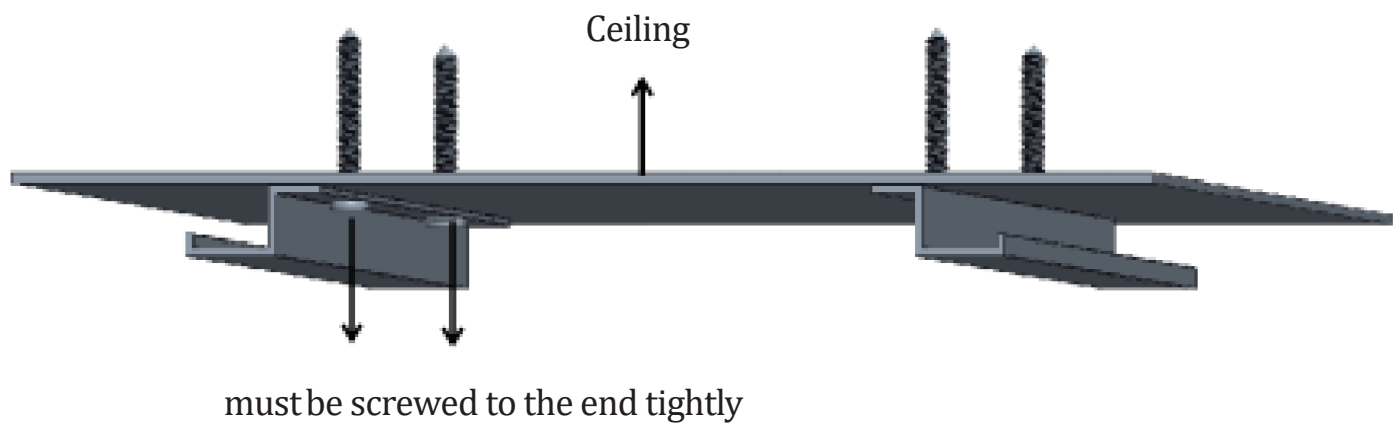



1. Drill four holes on the ceiling with correct distance A and distance B.
 Must use CORRECT diameter drilling bit to avoid panel falling!



2. Mount the two hanging units onto ceiling with screws, and turn the screws to the end tightly, this is very important.


















3. Push the rear of the left long frame into the hook, and then push back to make the rear of the right long frame into the other hook.
Note: 1. Hooks are for the two long frames only, not the two short ones!
2. Make sure the hooks are between the two limit screws !

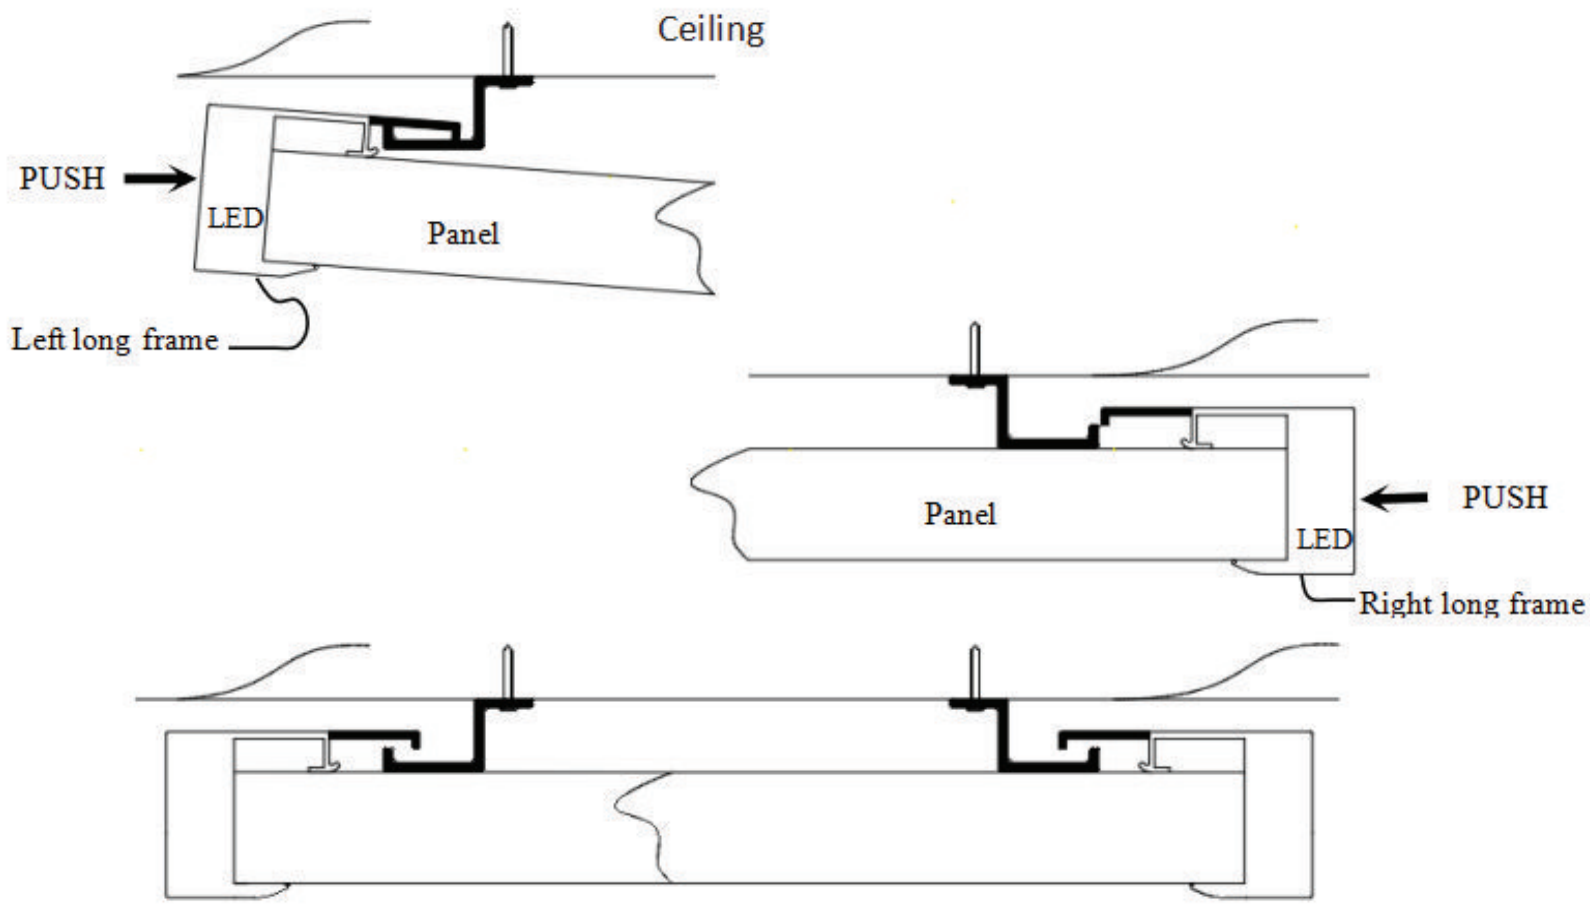

WARNING

To avoid falling off, you must slide the panel left and right to make sure the two hooks have been completely put into the rear of the two long frames!

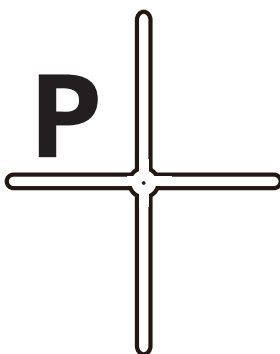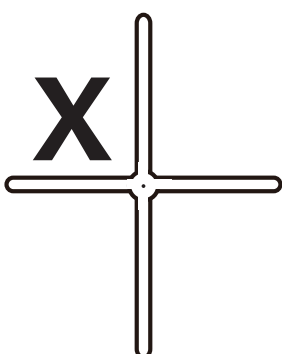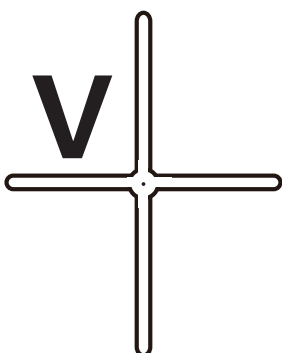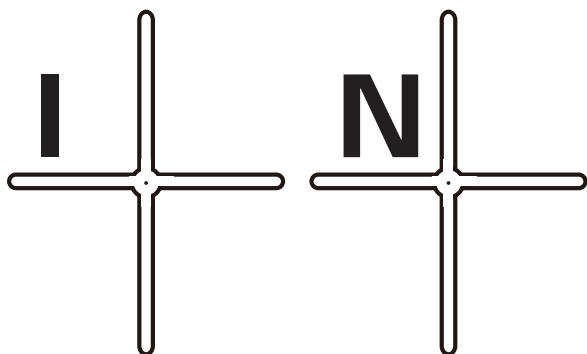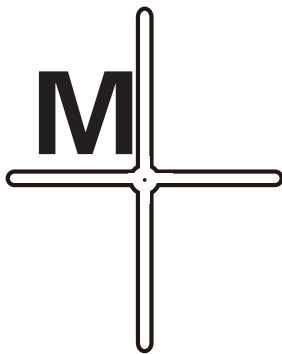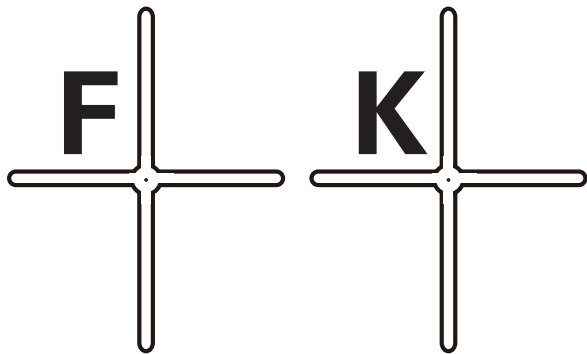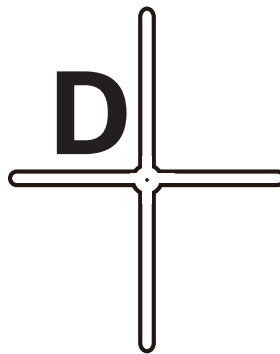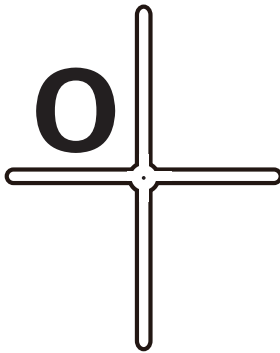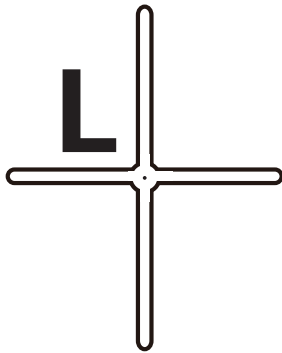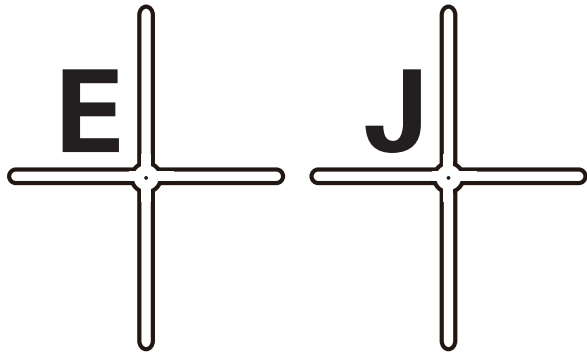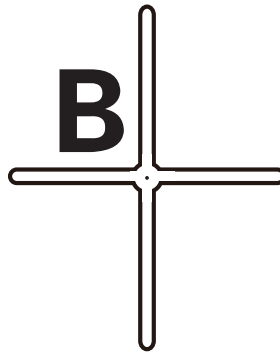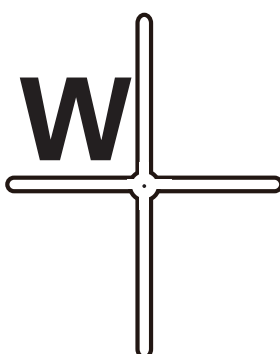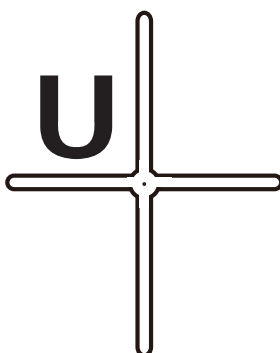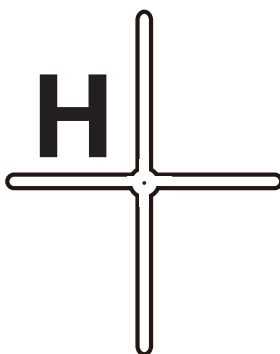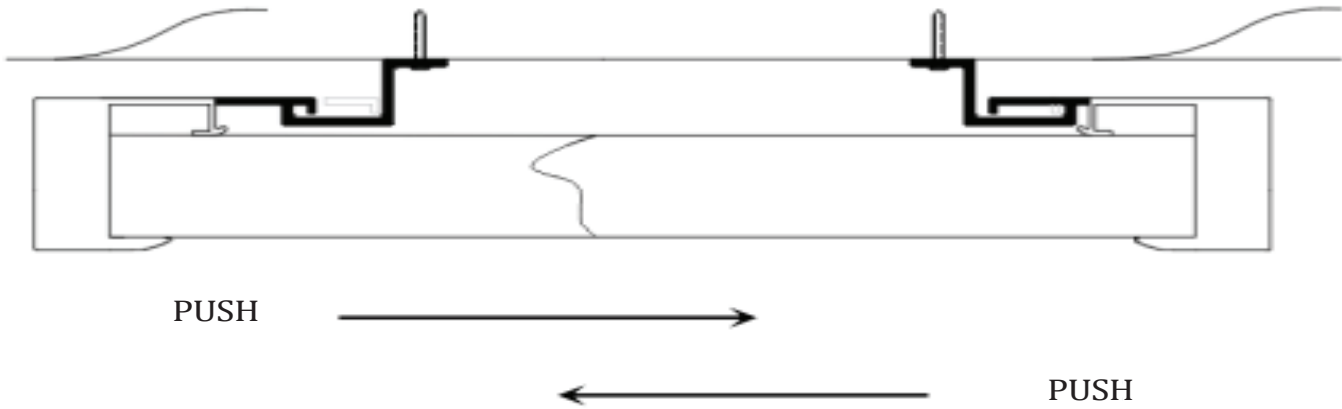

Panel Size/mm	Reference Points
522*522	ABCD
590*590	AECF
590*890	AEHI
590*1190	AEHI
655*630	AJCK
780*630	AJCK
700*700	ALCM
880*630	AJHN
800*800	AOHP
980*630	AJHN
1080*630	AJHN
1180*630	AJHN
1280*630	AJHN
1380*630	AJUV
1480*630	AJUV
1580*630	AJUV
1680*630	AJWX
1780*630	AJWX